

2350x1225x750 HIGH SINGLE LAYER BENCH KIT

GENERAL DESCRIPTION


A bench consists of a series of tubes joined together at the corners by a variety of welded fittings as detailed.

VASELINE JOINTS BEFORE ASSEMBLY

It is important that all straight tubes be Vaseline'd inside each end prior to joining them to the appropriate fittings. If this is not done, it may not be possible to pull the bench apart at a later date.

ASSEMBLY

Single layer benches are generally assembled inverted before adding legs to frame. Turn bench right way up before levelling the feet. Add mesh to top of bench. If it is necessary to tap fittings into tubes, use a rubber mallet or a piece of timber to prevent damage to fittings.

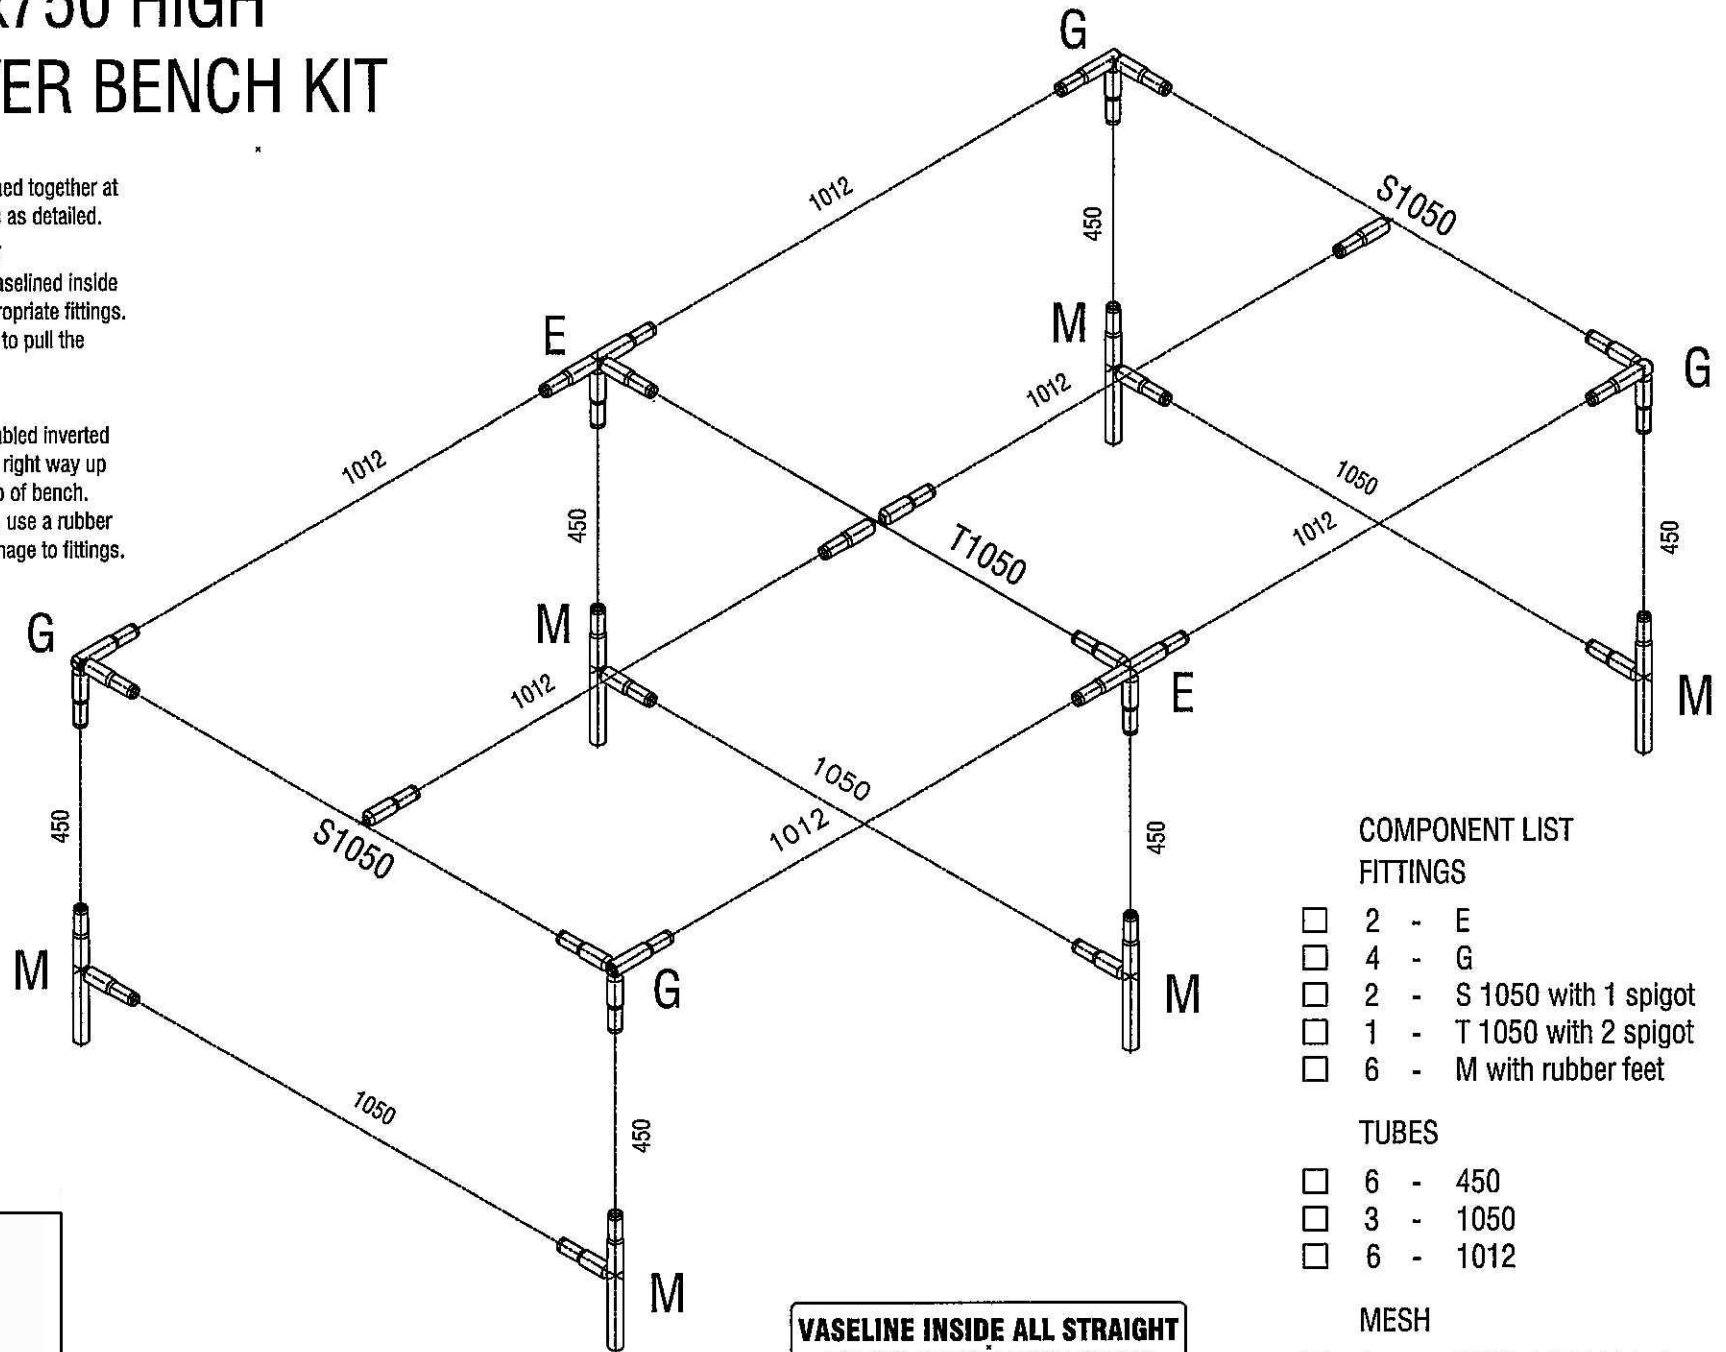

COMPONENT LIST

FITTINGS

- 2 - E
- 4 - G
- 2 - S 1050 with 1 spigot
- 1 - T 1050 with 2 spigot
- 6 - M with rubber feet

TUBES

- 6 - 450
- 3 - 1050
- 6 - 1012

MESH

- 1 - 2350x1275 folded

VASELINE INSIDE ALL STRAIGHT TUBES BEFORE ASSEMBLY



72-74 Mandon Road GIRRAWEE, NSW 2145
Phone: (02) 9631 6000 Fax: (02) 9688 4679